


FLite scooter

User Guide

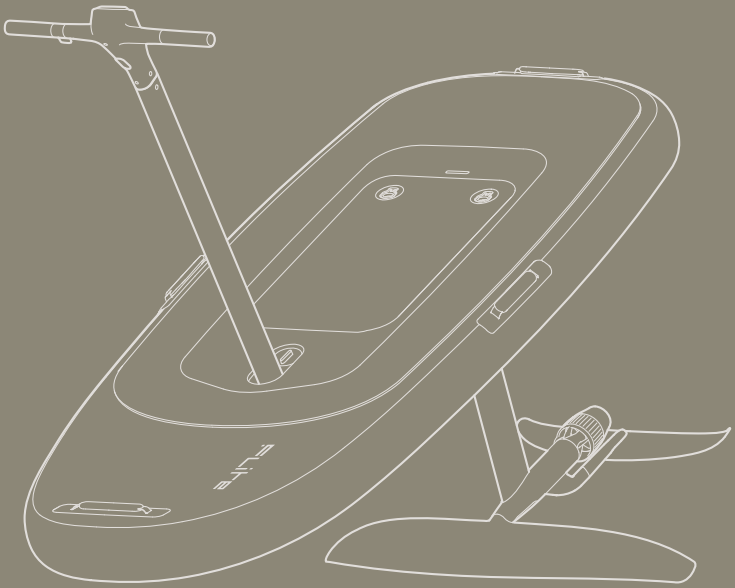

Product Activation

BEFORE USE, THIS PRODUCT MUST BE ACTIVATED USING THE FLITE APP.
fliteboard.com/app

Important

IN ORDER TO OPERATE THE PRODUCT CORRECTLY AND MINIMISE THE CHANCES OF DAMAGE, SERIOUS INJURY OR DEATH, IT IS ESSENTIAL TO READ AND FOLLOW ALL OF THE INSTRUCTIONS AND WARNINGS IN THE USER GUIDE PRIOR TO ASSEMBLY, SETUP OR USE. BY USING A FLITESCOOTER YOU AGREE THAT YOU DO SO AT YOUR OWN RISK.

CAUTION - THIS PRODUCT HAS BEEN KNOWN TO DRAMATICALLY IMPROVE YOUR LIFE AND HAPPINESS LEVELS.




For the latest version and translations of this guide visit

fliteboard.com/support



Watch our video tutorials at

fliteboard.com/video

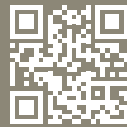

Authorised Flite Dealers and Fliteschools

fliteboard.com/locations



Download the Flite App

fliteboard.com/app



Fliteboard support

fliteboard.com/support



Fliteboard contact

fliteboard.com/contact



Material Safety Data Sheets

fliteboard.com/MSDS



Ready to fly post storage checklist

fliteboard.com/readytoflychecklist



6 Month Flitecell Checklist

fliteboard.com/flitecellchecklist

Flitescooter User Guide

6 Safety and Disclaimer

- 6 Warning
- 6 Intended use
- 7 Propulsion system
- 7 Hydrofoil safety
- 7 Learning to Flitescooter
- 8 Important rider safety

10 Flitecell

11 Warranty and Compliance

- 11 Warranty
- 11 Repairs

12 What makes up a Flitescooter

- 12 Flitescooter and wings
- 13 Flitecell
- 13 Flitecell Charger
- 14 Flitescooter eFoil

- 15 Accessories pouch

16 Getting started

- 17 Charging Flite Controller
- 18 Flitecell charging procedure
- 18 Flitecell Indicator Guide
- 19 Charging Flitecell
- 20 Flitescooter assembly
- 22 Connect the eFoil to Flitescooter

- 23 Connect the wing

- 24 Connect the fuselage tail

- 25 Connect the stabiliser wing

- 26 Connect Flitecell to Flitescooter

- 27 Download Flite App and update
- 28 Flite Controller overview
- 29 Turn on Flite Controller
- 30 Connecting Flite App to Flitescooter
- 31 Connecting Flite App to Flite Controller
- 31 Capturing sessions
- 32 Flite Controller pairing procedure

- 34 Flite Controller screens

- 38 Turning on Flitecell

- 39 Connect the handlebars to Flitescooter

- 40 Flitescooter safety aids

- 40 Select a suitable riding location

- 41 Arming the motor

42 Riding Flitescooter for the first time

- 44 Flitescooter common mistakes
- 45 Flitescooter pro tips

- 45 Foiling through turns

46 Maintenance and storage

- 47 Flitescooter
- 48 eFoil system
- 48 Flite Controller
- 49 Flite Controller and handlebars
- 50 Flitecell

52 Troubleshooting

- 54 Technical specifications
- 60 Warranty registration / Details of purchase
- 61 Maintenance schedule

Safety and Disclaimer

All safety and disclaimer information is subject to change at the sole discretion of Fliteboard. For up-to-date product information visit fliteboard.com/support

Warning

Failure to operate this product in a safe and responsible manner could result in injury or death to yourself or others and/or damage to the Flitescooter or other's property.

THIS PRODUCT MUST BE OPERATED WITH CAUTION AND COMMON SENSE AND REQUIRES SOME BASIC MECHANICAL ABILITY.

FLITESCOOTER IS NOT INTENDED FOR USE BY CHILDREN UNDER 16 YEARS OF AGE, SUBJECT TO LOCAL LAWS AND REGULATIONS.

DO NOT USE WITH INCOMPATIBLE COMPONENTS OR ALTER THIS PRODUCT IN ANY WAY OUTSIDE OF THE DOCUMENTS PROVIDED BY FLITESCOOTER.

FLITESCOOTER IS NOT A TOY. EXERCISE CAUTION. ACT RESPONSIBLY WHILE OPERATING.

CONSIDER THE SAFETY OF YOUR ENVIRONMENT BEFORE OPERATING FLITESCOOTER. DO NOT RIDE IN SHALLOW WATER (LESS THAN 1.5M IN DEPTH), ROCKY AREAS OR IN SEVERE WEATHER CONDITIONS.

IT MAY BE NECESSARY TO OBTAIN A LICENCE OR PERMIT TO USE A FLITESCOOTER IN CERTAIN STATES OR COUNTRIES.

Intended use

Flitescooter is for operation by one person only, who should be over the age of 16 (or as local laws apply). It is not designed for passengers or towing of objects or people. Please check your local regulations for age and legal requirements. We recommend adult supervision. Licence regulations vary from state to state and country to country. For example, in Australia, Flitescooter is exempt from registration in some states, and in others it must be registered as a vessel. It is the responsibility of riders to be aware of and comply with regulations in their specific location.

Flitescooter must travel at a safe speed so that Flitescooter can be stopped in time to avoid any danger which may suddenly arise. When judging a safe speed, you must consider a number of factors - visibility, other vessels, navigation hazards, wind, waves and currents, waterway width and the manoeuvrability of your vessel.

For your safety and that of others, please ensure that you obtain proper training or practice before operating Flitescooter yourself.

This User Guide does not provide boating safety or seamanship advice. Please consult local laws and guidelines for boating safety.

If you have any questions about the operation or maintenance of Flitescooter, please consult Flitescooter technical support, or an Authorised Flite Reseller.

This User Guide should be considered a permanent part of Flitescooter and should remain with it even if it is subsequently sold.

Propulsion system

The Flitescooter propulsion system includes a powerful Flite Jet.

KEEP BODY, FINGERS AND TOES AWAY FROM THE FLITESCOOTER'S SPINNING PROPELLER OR IMPELLER. CONTACT WITH THE PROPELLER OR IMPELLER WILL CAUSE SERIOUS INJURY OR DEATH.

NEVER TOUCH THE PROPELLER OR IMPELLER IN OR OUTSIDE OF THE WATER.

NEVER HANDLE THE PROPELLER OR IMPELLER WHILE THE FLITECELL IS CONNECTED.

ALWAYS FLITESCOOTER A SAFE DISTANCE FROM OTHER WATERCRAFT, SWIMMERS, SURFERS, DIVERS AND WILDLIFE.

NEVER FLITESCOOTER IN SEAWEED OR CONTAMINATED WATER.

Hydrofoil safety

The Flitescooter hydrofoil system comprises a mast (or strut), a main wing and stabiliser wing. These components include sharp trailing edges and wing tips. Take care not to kick or hit the sharp edges when in the water.

FALLING ON THE HYDROFOIL CAN CAUSE SERIOUS INJURY OR DEATH.

WE ALWAYS RECOMMEND YOU WEAR APPROPRIATE SAFETY GEAR WHEN FLITESCOOTERING, INCLUDING AN APPROVED IMPACT VEST / PFD AND HELMET. CHECK YOUR LOCAL REGULATIONS TO CONFIRM IMPACT VEST / PFD AND HELMET REQUIREMENTS. REFER TO THE MANUFACTURER'S DOCUMENTATION ON SAFETY, CARE AND MAINTENANCE GUIDELINES FOR YOUR IMPACT VEST / PFD AND HELMET.

TAKE CARE TO LEARN STEP BY STEP, FOLLOWING THE INSTRUCTIONS IN THIS GUIDE AND THE GUIDES SECTION OF THE FLITE APP.

fliteboard.com/app

Learning to Flitescooter

We recommend learning to Flitescooter with an instructor at an authorised Fliteschool. Fliteschool locations can be found at fliteboard.com/locations

PLEASE VIEW OUR HOW TO FLITESCOOTER VIDEO AT fliteboard.com/video TO LEARN THE PROPER TECHNIQUE AND REVIEW RIDING SAFETY INFORMATION.

FLITESCOOTER IS NOT SUITABLE FOR RIDING BREAKING WAVES IN THE SURF ZONE. RIDERS DO SO AT THEIR OWN RISK. FLITESCOOTER SHOULD NEVER BE RIDDEN NEAR OTHER WATER USERS (INCLUDING SWIMMERS AND SURFERS) OR OFFSHORE FROM SWIMMERS AND SURFERS (IN CASE FLITESCOOTER IS PUSHED TOWARDS SHORE IN A WAVE).

FLITESCOOTERING CAN BE EASY WHEN PROPER TECHNIQUE IS APPLIED. INCORRECT TECHNIQUE CAN RESULT IN INJURY OR DAMAGE.

DO NOT CLEAN THE FLITECELL OR CHARGER WITH WD-40, CITRUS CLEANERS, CONTACT CLEANERS.

AVOID CONTACT WITH SUNSCREENS, LUBRICANTS, PETROL, THREAD LOCKER, AND DIESEL.

Important rider safety

1 Read the User Guide and watch the How to Fliteboard video


Before attempting to Flitescooter for the first time, read this User Guide and pay special attention to the warnings and disclaimers. Most injuries can be avoided by using proper technique when learning. Watch the How to Fliteboard videos in the Guides section of the app. fliteboard.com/app



2 Wear a helmet and Impact Vest / PFD

Wear an approved and certified helmet and impact vest / PFD (Personal Flotation Device) at all times.

There may be specific rules and legal requirements in your location that also apply.

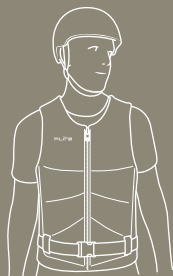


3 Avoid contact with the wings and Flite Jet

Avoid contact with the wings, mast and Flite Jet, which all have sharp edges. Take care to not kick the wings when climbing on to the board.




4 Keep distance

Keep well clear of other water users at all times. Check regulations for vessel operating distance rules in your area. Always be on the lookout for swimmers, divers, other vessels or obstacles when riding; they may be obscured by waves or glare.

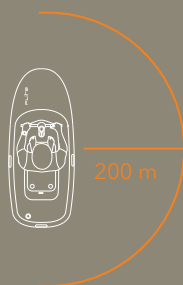

5 Release the throttle

 Release the thumb throttle immediately on committing yourself to a fall. This will stop the motor and reduce the forces which could otherwise lead to a more extreme crash. Practice this skill when learning with the goal of stopping the motor before you hit the water in a fall.



6 Wireless safety key

Model WSK1

Battery CR2032 coin battery, 220mAh, 3.0V

Operating temperature range -20 to 60 °C / -4 to 140 °F

FCC warning Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



WARNING

THE WIRELESS SAFETY KEY CONTAINS A LITHIUM BUTTON / COIN CELL BATTERY

Button/coin cell batteries are hazardous and must be kept out of reach of children at all times, whether the battery is new or used. These batteries can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body.

If it is suspected a button/coin cell battery has been swallowed or placed inside any part of the body, seek immediate medical attention or contact your local Poisons Information Centre.

Dispose of used button/coin cell batteries immediately. Place sticky tape around both sides of the battery and dispose in an outside bin, out of reach of children, or recycle safely.

Flitecell

Flitecell is a carefully engineered water resistant marine battery. If the Flitecell is damaged (for example during transportation or handling) the seal may become compromised. A damaged Flitecell that comes into contact with water may result in internal damage including corrosion which could result in a fire and/or explosion.

USE FLITECELL AT YOUR OWN RISK.

SIGNS OF A COMPROMISED FLITECELL

- SIGHT GLASS LABEL HAS TURNED RED, INDICATING WATER INGRESS
- LOOSE SCREWS/RIVETS
- CONNECTOR COMING LOOSE
- CRACK IN HOUSING/CASE
- DEFORMATION
- UNUSUAL SMELL
- HIGH TEMPERATURE DURING CHARGING (60°C OR MORE)

CAREFULLY INSPECT FLITECELL BEFORE EACH USE.

IF A FLITECELL CASING HAS VISIBLE DAMAGE AND THE FLITECELL FALLS INTO WATER, TAKE IT OUT IMMEDIATELY AND PUT IT IN A SAFE AND OPEN AREA. MAINTAIN A SAFE DISTANCE FROM FLITECELL UNTIL IT IS COMPLETELY DRY. DO NOT USE FLITECELL AGAIN AND DISPOSE OF FLITECELL PROPERLY.

FLITECELL MUST BE USED IN TEMPERATURES FROM 0°C TO 40°C. USE OF FLITECELL IN ENVIRONMENTS ABOVE 40°C MAY LEAD TO AN OVERHEATED BATTERY. USE OR CHARGING OF FLITECELL BELOW 0°C CAN LEAD TO PERMANENT FLITECELL DAMAGE.

ALWAYS KEEP FLITECELL DRY. IF FLITECELL HAS BEEN EXPOSED TO WATER, PLACE IN A COOL DRY PLACE.

DO NOT DROP OR STRIKE FLITECELL.

DO NOT PLACE HEAVY OBJECTS ON FLITECELL OR THE CHARGER.

DO NOT USE FLITECELL TO OPERATE ANY DEVICE OTHER THAN FLITEBOARD.

DO NOT CHARGE OR USE A DAMAGED FLITECELL. IF YOUR FLITECELL IS COMPROMISED, CONTACT FLITEBOARD OR A FLITE SERVICE DEALER FOR FURTHER ASSISTANCE.

DO NOT USE FLITECELL IF IT WAS INVOLVED IN A SEVERE CRASH OR HEAVY IMPACT.

DO NOT USE A NON FLITECELL BATTERY. ANY DAMAGE CAUSED BY A NON-OFFICIAL BATTERY WILL NOT BE COVERED BY WARRANTY.

DO NOT DISASSEMBLE FLITECELL. DOING SO COULD CAUSE AN INJURY OR LEAD TO A WATER LEAK OR FIRE. TAMPERING WITH THE FLITECELL BATTERY WILL VOID THE WARRANTY.

DO NOT HEAT FLITECELL. KEEP AWAY FROM HEATING SOURCES AND OUT OF DIRECT SUNLIGHT.

DO NOT PUT FLITECELL IN A MICROWAVE OVEN, FREEZER OR IN A PRESSURISED CONTAINER.

DO NOT OPEN FLITEBOARD LID UNDER ANY CIRCUMSTANCES WHILST IN WATER OR WITH WET HANDS.

IN CASE OF A FLITEBOARD OR FLITECELL FIRE, EXTINGUISH WITH COLD WATER WITHOUT ADDITIVE.

FOR FURTHER INFORMATION ABOUT INCIDENT RESPONSE AND DISPOSAL, PLEASE REFER TO THE MATERIAL SAFETY DATA SHEET (MSDS).

DISPOSE OF THE FLITECELL IN SPECIFIC RECYCLING BOXES ONLY AFTER A COMPLETE DISCHARGE. DO NOT PLACE FLITECELL IN REGULAR TRASH CONTAINERS. STRICTLY FOLLOW YOUR LOCAL REGULATIONS REGARDING THE DISPOSAL AND RECYCLING OF BATTERIES.

DO NOT CLEAN THE FLITECELL OR CHARGER WITH WD-40, CITRUS CLEANERS, CONTACT CLEANERS.

AVOID CONTACT WITH: SUNSCREENS, LUBRICANTS, PETROL, THREAD LOCKER, AND DIESEL.

Warranty

Flitescooter comes with a Limited 2-year Warranty which covers defects in materials or workmanship of the product and aligns to relevant consumer laws of the location of purchase. Further details about the Fliteboard Limited Warranty are set out in your Purchase Agreement and on our website.

For our Australian customers – our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Product Registration for Warranty now recorded in the FLITE APP

Maintaining your Flitescooter

Flitescooter is much more than a surfboard. Similar to any other electric powered vehicle, it needs to be serviced regularly and maintained to ensure good working order and to prevent breakage.

In order to maintain your Flitescooter in optimal condition you must meet the maintenance schedule set out under Servicing requirements section on this page.

To find your nearest Flite Service Dealer, visit fliteboard.com/locations

Flitescooter has been extensively tested with riders weighing up to 120kg / 265lbs. Our specified limit for warranty is defined in the Technical specifications section of this User Guide.

Information about recommended wing and board combinations for beginner and experienced riders, and lighter and heavier riders, can be found at fliteboard.com/support

For full comprehensive storage and maintenance instructions, visit the support portal fliteboard.com/support

Servicing requirement for valid warranty

Prop C, MN Carbon Dual Drive, MN Carbon Prop C and MN Carbon Wave C require servicing every **100 hours or 1 year, whichever comes first.**

Jet C, Flitescooter C and MN Carbon Jet C (all systems with Flite Jet 2), require servicing every **200 hours or 2 years, whichever comes first.**

Carefully pack the eFoil and Flite Controller in the original eFoil Travel Bag including foam inserts. Send to a Flite Service Dealer or Fliteboard HQ (whichever is closest). Flitecell, wings, chargers or other accessories are not required and should not be included.

Please refer to our 'Packing your Fliteboard' video and help documentation via fliteboard.com/support

Repairs

If subjected to damage the Flitescooter core may be repaired by a surfboard repair specialist. The inflatables may be repaired using the included repair kit.

Shipping compliance


Shipping batteries can be illegal and dangerous if not done in accordance with dangerous goods shipping regulations. Always consult an appropriate specialist before shipping your Flitecell. Refer to the included MSDS regarding shipping your Flitecell by sea.

What makes up a Flitescooter


You will receive your Flitescooter in separate shipment packages.

Flitescooter and wings


Within the board bag you will find the Flitescooter core, bladder, pump and hose, handlebars, Cruiser 1800 wing and Flite 500 stabiliser wing. Cruiser 1800 wing comes with cover and associated fasteners. Flite 500 stabiliser comes with a cover and the required shims can be found in the accessories pouch.

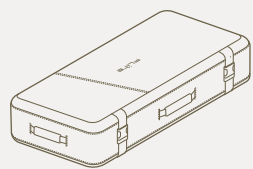

Flitescooter travel bag

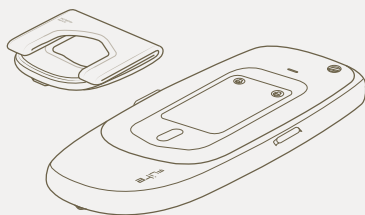


Flitescooter bladder

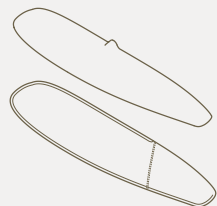

Cruiser 1800 C
2 x M8 x 18mm




Flitescooter core

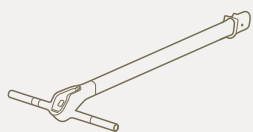

Flitescooter handlebars




Flite 500 C
2 x M6 x 20mm

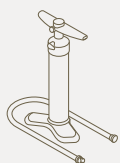


Flitescooter pump and hose

Flitecell


Within the included padded Flitecell bag you will find Flitecell Explore or Flitecell Sport, depending on your choice.

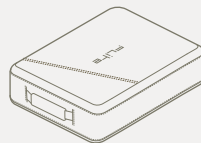

Flitecell travel bag

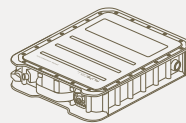

Flitecell Explore

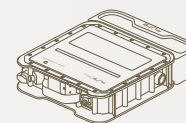


Flitecell Sport
+ spacer

Flitecell Charger


Within the included Flitecell Charger travel bag, you will find either Flitecell Fast Charger or Flitecell Slow Charger, depending on your choice.



Flitecell Charger travel bag

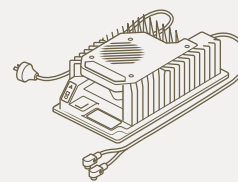

Flitecell Fast Charger

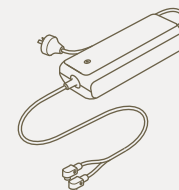


Flitecell Slow Charger

Flitescooter eFoil

You will receive your eFoil system in a travel bag.




eFoil travel bag
eFoil system
Fastener tool torx
eFoil flange fasteners
Tail piece fastener

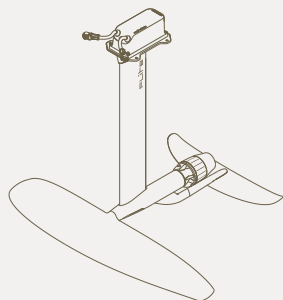

Flitescooter C
65cm / 25.6"
Including Flite Jet 2
Conical wing interface

Accessories pouch

Within the accessories pouch you will find the following components and your chosen Flite Controller.

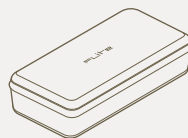

Accessories pouch




Tef-Gel + Brush




User Guide



Mast Flange Seal

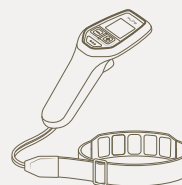

Flite Controller

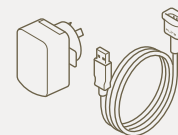

Flite Controller
USB wall charger
and charging cable



Magnetic Clip



Wireless Safety Key

Getting started

The best way to learn to Flitescooter is to find a Fliteschool in your area. Locate your nearest Fliteschool at fliteboard.com/fliteschool


Watch the Fliteboard video Guides in the Flite App. fliteboard.com/app

In order to operate the product correctly, avoiding damage or serious injury, it is essential to read and follow all instructions and warnings in the User Guide prior to assembly, setup or use.

IT IS BEST TO ASSEMBLE YOUR BOARD IN A CLEAN, DRY ENVIRONMENT.


FLITESCOOTER IS INTENDED FOR USE WITH THE SUPPLIED FLITE JET, EFOIL AND WINGS ONLY. FLITESCOOTER IS INTENDED FOR USE WITH THE SERIES 2.2 AND LATER FLITE CONTROLLER ONLY.

THE FLITESCOOTER EFOIL IS SET TO SCOOTER MODE AT FACTORY.

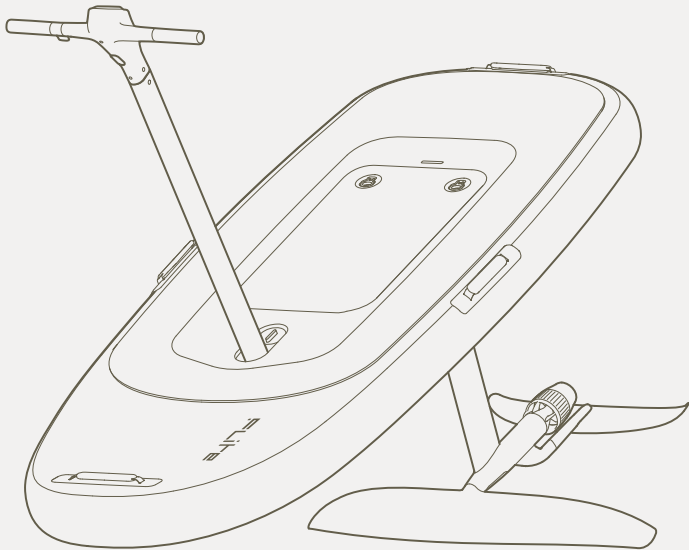

Charging Flite Controller

- 1 Remove Flite Controller from the accessories pouch.
- 2 Remove Flite Controller USB Wall Charger and Charging Cable from the accessories pouch.
- 3 Carefully peel out the rubber cover on the underside of Flite Controller. Attach the magnetic charging plug, ensuring the charging pins are connected.
- 4 Plug in the USB Wall Charger and turn on. When Flite Controller is charging correctly, the screen will show a charging message. Be careful not to disconnect the magnetic charging plug whilst charging. Always check to ensure Flite Controller is at least 50% charged before each use.

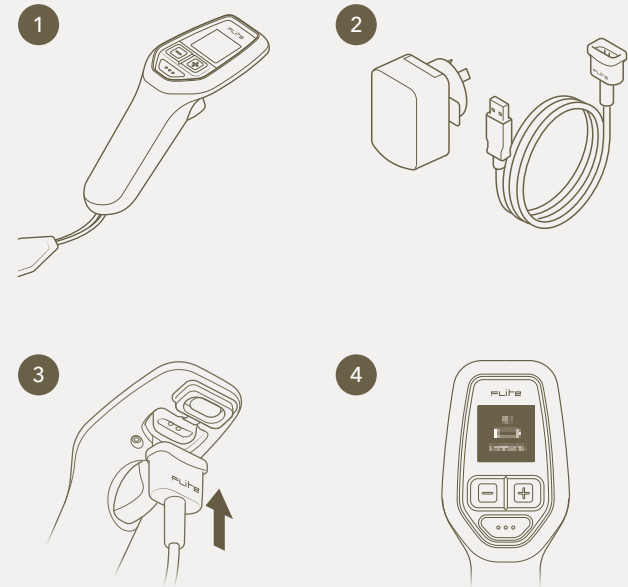

Flitecell charging procedure

DO NOT COVER THE CHARGER OR INTAKE DURING CHARGING. THE CHARGER SHOULD BE PLACED OUT OF THE REACH OF CHILDREN. CHARGE IN AN INDOOR AREA WITH GOOD VENTILATION AND HEAT DISSIPATION.


DO NOT CHARGE IN HUMID, HIGH TEMPERATURE CONDITIONS. DO NOT CHARGE NEAR FLAMMABLES OR EXPLOSIVES. DO NOT DISASSEMBLE THE CHARGER - THERE IS A DANGER OF HIGH VOLTAGE IN THE CHARGER CASE.

DO NOT CHARGE IF FLITECELL IS WET.





FLITEBOARD DOES NOT BEAR ANY RESPONSIBILITY FOR INCORRECT USE OF THE CHARGER. USERS MUST OPERATE THE CHARGER ACCORDING TO THE USER GUIDE.

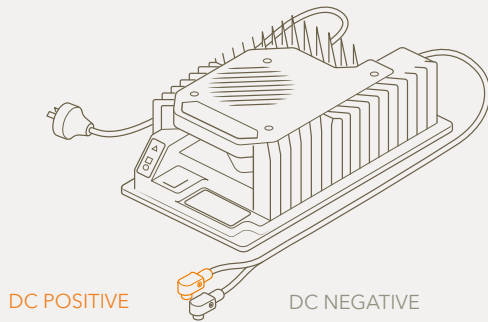ALWAYS KEEP THE RED TERMINAL CAPS ON THE FLITECELL WHEN NOT CONNECTED TO THE BOARD/CHARGER.

Flitecell Fast Charger



Flitecell Indicator Guide

	Power on	
	Flashing green	Charging
	Solid red	Charger fault
	See charger manual	
	Flashing amber	External error
	See charger manual	
	Flashing green	USB port active
	Solid green	Safe to remove USB flash drive


Charging Flitecell

- 1 Remove Flitecell from its travel bag.
- 2 Place Flitecell in a cool dry location away from flammable or hot items. Safe charging temperatures are 0 - 40°C and optimal charging temperatures are 10 - 30°C.
- 3 Connect Flitecell charger plugs to Flitecell terminals ensuring to connect the orange (positive) connector to the orange terminal first and the black (negative) connector to the black terminal.
- 4 Check that connections have been made correctly. Plug the charger in the wall socket. Place the supplied magnet on the Flitecell for 5 - 10 seconds, as shown by arrow, to activate charging. If the magnet has been misplaced, you can use the base of Flite Controller to initiate charging.
- 5 The charger will automatically turn off when the charging process is complete.


FLITECELL IS A POWERFUL BATTERY CONTAINING A SIGNIFICANT AMOUNT OF ENERGY. CHARGING A DAMAGED FLITECELL CAN RESULT IN A FIRE OR EXPLOSION. ALWAYS INSPECT THE FLITECELL BEFORE CHARGING. CHARGE THE FLITECELL UNDER SUPERVISION, IN A SAFE LOCATION, AWAY FROM DIRECT SUNLIGHT, MOISTURE AND AWAY FROM FLAMMABLE OBJECTS AND SURFACES.

THE BATTERY MANAGEMENT SYSTEM (BMS) BALANCES AND OPTIMISES FLITECELL DURING EACH CHARGE CYCLE.

IT IS RECOMMENDED TO DISCONNECT THE FLITECELL AFTER A FULL CHARGING CYCLE.

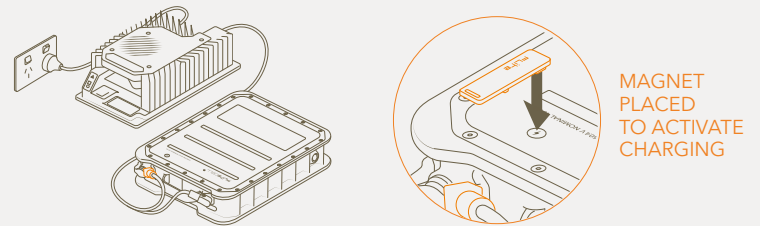


Flitecell light

 Flitecell light	Light meaning
	Capacity 0% - 10%
	Capacity 10% - 20%
	Capacity is 20% - 35%
	Capacity 20% - 35% + charging
	Capacity 35% - 65%
	Capacity 35% - 65% + charging
	Capacity 65% - 100%
	Capacity 65% - 100% + charging

Flitescooter assembly


Fitting the Flitescooter bladder to the core requires proper technique as the fitment between the two is tight for maximum strength. We recommend doing this process with two people, at least the first few times.

- 1 Place the rigid core (Flitebox cavity side up) on a flat, smooth surface to avoid scratching the carbon finish on the core.
- 2 Unroll Flitescooter bladder face down.
- 3 Slide bladder onto core from front end first, maintaining the bladder flap above the core.

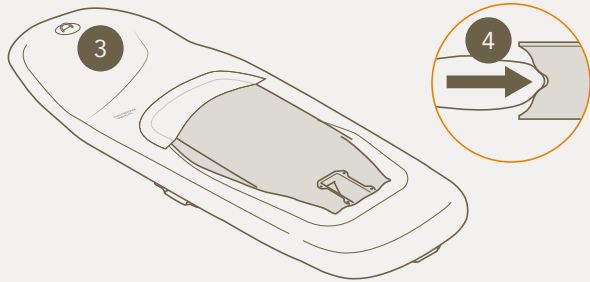

- 4 Ensure bladder is well tucked into the recess along the front edge of the core.
- 5 Carefully stretch bladder over one rear corner first.

NOTE THAT THE REAR UNDERSIDE EDGES OF THE CORE ARE DELIBERATELY SHORTER THAN THE TOP FACE TO MAKE FITMENT OF THE BLADDER EASIER. WARM MILD SOAPY WATER SOLUTION MAY BE APPLIED TO THE FLITESCOOTER BLADDER TO ASSIST WITH FITMENT AND EASE OF ALIGNMENT. RINSE OFF SOAP SOLUTION WITH FRESH WATER AFTER FITMENT IS COMPLETE.

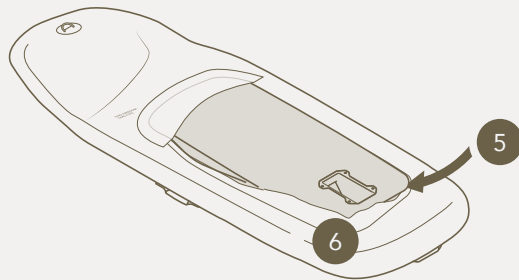


- 6 To stretch bladder over the other rear corner, you will likely need two people. While one person pulls on the bladder, the other person can tap the bladder down with the palm of their hand to get it over the core and into place. If you don't have a second person to assist with fitting the bladder, you could carefully place your foot in the Flitebox cavity to get leverage for stretching it over the final rear corner.
- 7 Be careful that the bladder is positioned evenly and not creased or caught. Check bladder is seated correctly around the core before carefully flipping the Flitescooter over.


DO NOT USE ANY OBJECTS TO GET LEVERAGE FOR FITTING THE FINAL REAR CORNER AS IT COULD DAMAGE THE CORE. PLACE ON A SMOOTH, SOFT SURFACE TO AVOID SCRATCHING THE CARBON FINISH ON THE CORE.

Inflating Flitescooter


- 1 Twist the valve cap anti-clockwise to remove.
- 2 To inflate, push the central valve down.
- 3 Twist anti-clockwise to release.
- 4 The valve will pop up. This ensures the bladder will not deflate when you remove the hose after inflation.

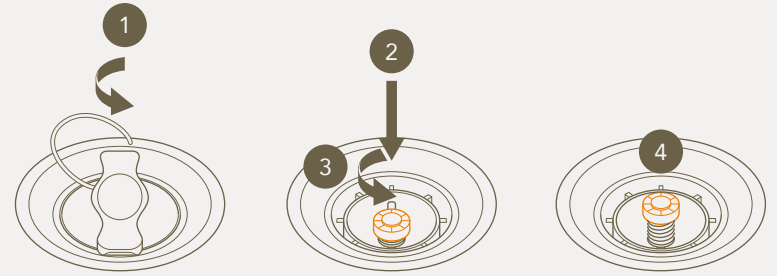

- 5 Connect pump hose to valve and inflate bladder to 15 - 16 PSI.
THIS IS IMPORTANT FOR OPTIMUM PERFORMANCE AND SAFETY.

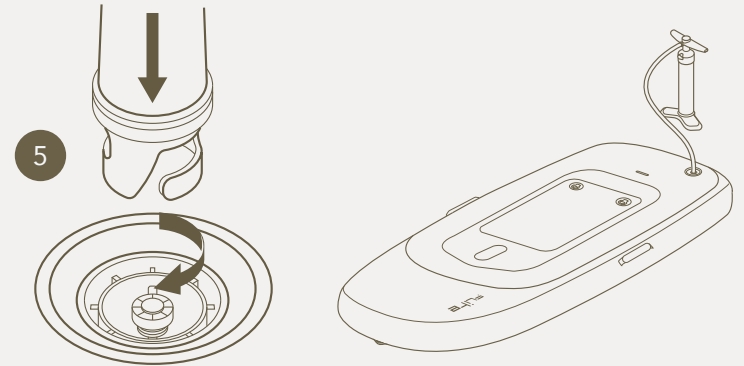


- 6 Once inflated to 15 - 16 PSI, twist the pump hose anti-clockwise to remove and re-fit the valve cover cap. When disconnecting the pump hose, no air should escape from the valve. If the bladder deflates you must release the central valve (see step 2) and re-inflate. Flitescooter is now inflated.

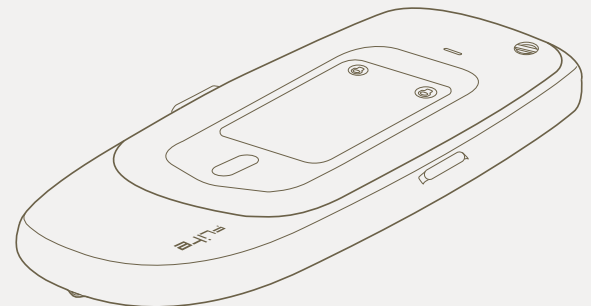


Connect the eFoil to Flitescooter

- 1 Place the Flitescooter upside down on a clear surface. Locate the Flitebox cavity on the bottom of the board and ensure the 4 retaining screws are removed.
- 2 Check to ensure the orange o-ring is inserted, properly seated in the Flitebox cavity o-ring groove, clean and free of sand, grit or water.
- 3 Carefully lift the eFoil from its bag and place the Flitebox into the cavity. While doing this ensure the power cables feed through into the Flitescooter cavity.
- 4 Ensure the Flitebox is properly seated in the cavity and flush with the board surface.
- 5 Add a thin layer of Tef-Gel to the 4 x 20mm stainless steel fasteners. Tighten them in a cross pattern, first using your fingers to ensure the threads are properly engaged, and then using the supplied torx key. Medium force (a torque of 6 Nm) needs to be applied when using the long arm of the key to ensure the fasteners are tight.
- 6 When properly tightened, the eFoil should be secured and the o-ring compressed. Failure to properly tighten the fasteners or fit the o-ring will result in a board leak.
- 7 Be careful not to over-tighten the fasteners as this could result in stripped threads or damaged fasteners.

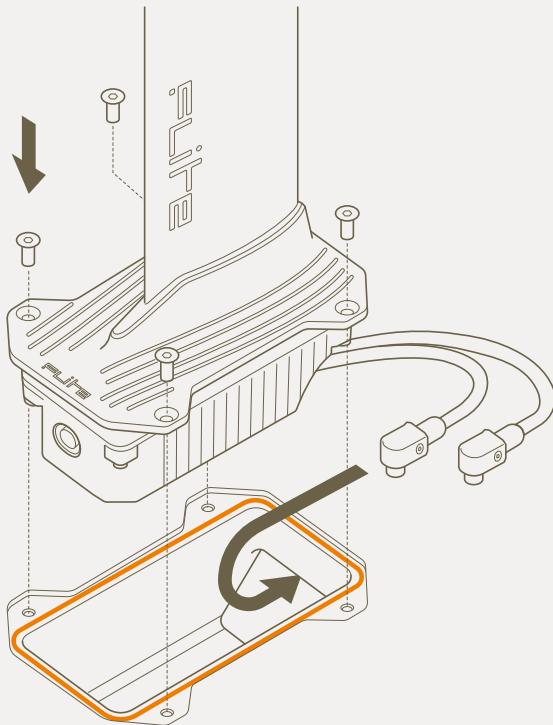


Connect the wing

- 1 Remove your Cruiser 1800 C wing from the travel bag and from its wing cover.
- 2 Place the wing in position as shown.
- 3 ALWAYS add Tef-Gel to the fasteners before inserting them.
- 4 Tighten the fasteners with the supplied torx key, ensuring the fasteners are tight enough that the wing cannot move or wobble significantly during use. Use a torque of 16Nm for the M8 fasteners.

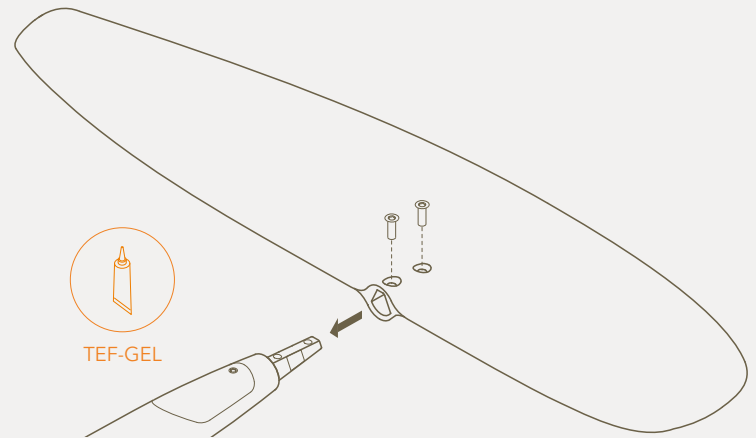

Connect the fuselage tail


- 1 Place the board upside down with the eFoil connected. Take the fuselage tail from the travel bag, add a light cover of Tef-Gel to the tail connection and install the tail into the fuselage.
- 2 Add a thin layer of Tef-Gel from the tube supplied to the thread of the supplied 16mm fastener. Carefully tighten using the supplied torx key, ensuring the fastener is tight enough that the tail cannot move or wobble significantly during use. Use a torque of 6Nm to tighten the fastener. You may need to push the tail (compresses the o-ring) for the screw to find the thread. Misalignment may cause damage to the thread.

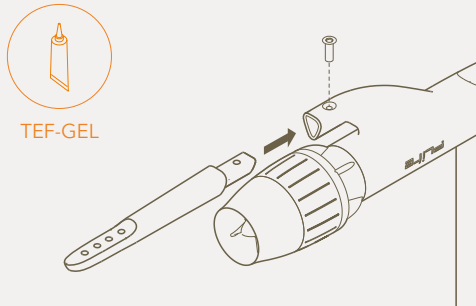

Connect the stabiliser wing

- 1 Take the Flite 500 stabiliser from the travel bag and remove the wing cover.
- 2 Take the correct stabiliser wing shim and fit between the stabiliser wing and the fuselage tail.
- 3 To ensure correct mounting, direction and placement, the wing when installed correctly should have the rounded, curved leading edge facing the front wing.

ALWAYS ADD TEF-GEL TO THE STAINLESS STEEL FASTENERS - FAILURE TO DO SO MAY RESULT IN CORROSION AND DAMAGE TO YOUR EFOIL. IF LEAVING WINGS ATTACHED FOR EXTENDED PERIODS, ENSURE THAT YOU LOOSEN FASTENERS AND RE-APPLY TEF-GEL EVERY FEW WEEKS. FAILURE TO DO SO MAY RESULT IN CORROSION AND DAMAGE TO YOUR EFOIL FASTENER INSERTS.

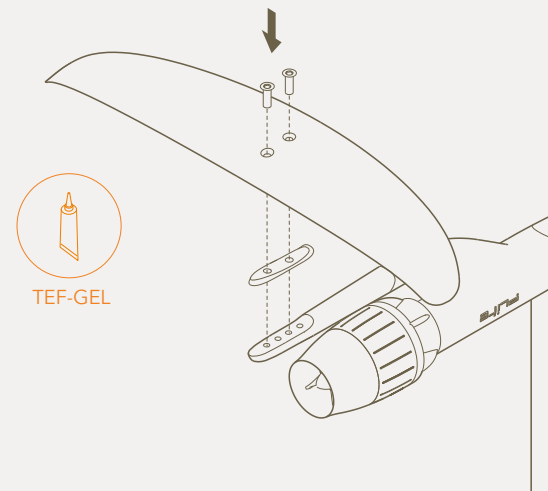

Shim 2.0 suits most riders.

Move forward or back on the board to find a balanced and comfortable standing position when foiling.

Shim 2.0 to 3.0 = More lift
Standing position further forward

Shim 0 to 2.0 = Less lift
Standing position further back



Connect Flitecell to Flitescooter


With the eFoil, fuselage tail and wings attached, it's time to carefully turn your board over so it stands on BOTH the front wing and nose of the board.

- 1 Twist the lid latches and open the board lid.



DO NOT OPEN LID WHILST IN THE WATER UNDER ANY CIRCUMSTANCES.

- 2 Take Flitecell by the handle and carefully lower it into the board cavity, ensuring to move cables out of the way first. The warning label should be facing up.

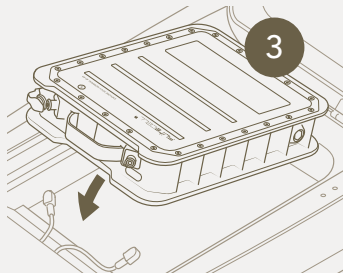


BE CAREFUL NOT TO DAMAGE THE BOARD SEAL WHEN FITTING FLITECELL. ANY KNICKS, CUTS OR DAMAGE TO THE SEAL MAY RESULT IN LEAKS.

BE CAREFUL NOT TO RECONNECT FLITECELL POWER CABLES WITHIN 10 SECONDS OF DISCONNECTION TO AVOID A POSSIBLE ARC.

- 3 If a Flitecell spacer is needed, place it in the board cavity first.
- 4 Connect the orange power cable to the orange power in Flitecell. You will feel a secure click when properly engaged. Note - Depress the button on the side of the connector when removing the connector.
- 5 Connect the black power cable to the black power in Flitecell.

Flitecell is now connected.

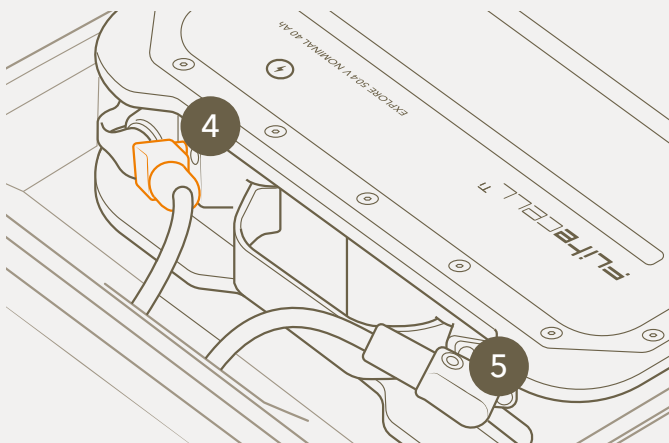


Download Flite App and update

Before use, this product must be activated using the Flite App. fliteboard.com/app

Flite App is available to download in the Apple App Store™ and Google Play Store™. We recommend using Flite App to ensure your eFoil and Flite Controller always have the latest software to deliver the best performance.


In addition to enhancing your experience on the water, Flite App connects you to a global community of Fliteboard riders. Share your sessions, compete and discover new places to ride.

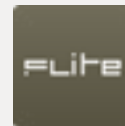


Download
Flite App

fliteboard.com/app

Flite Controller overview


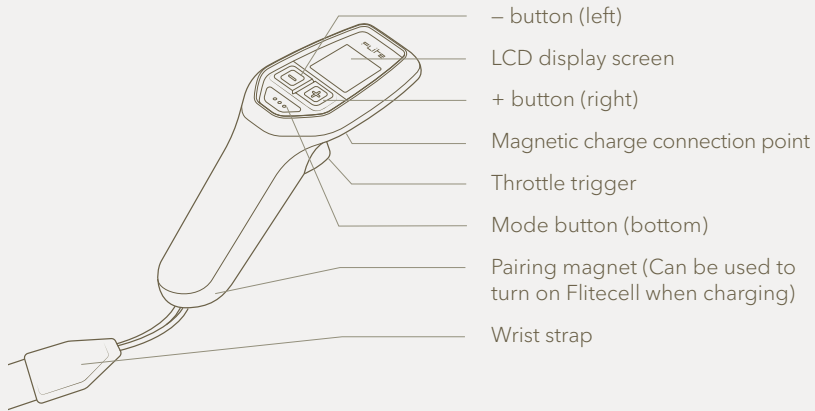


Handlebars overview

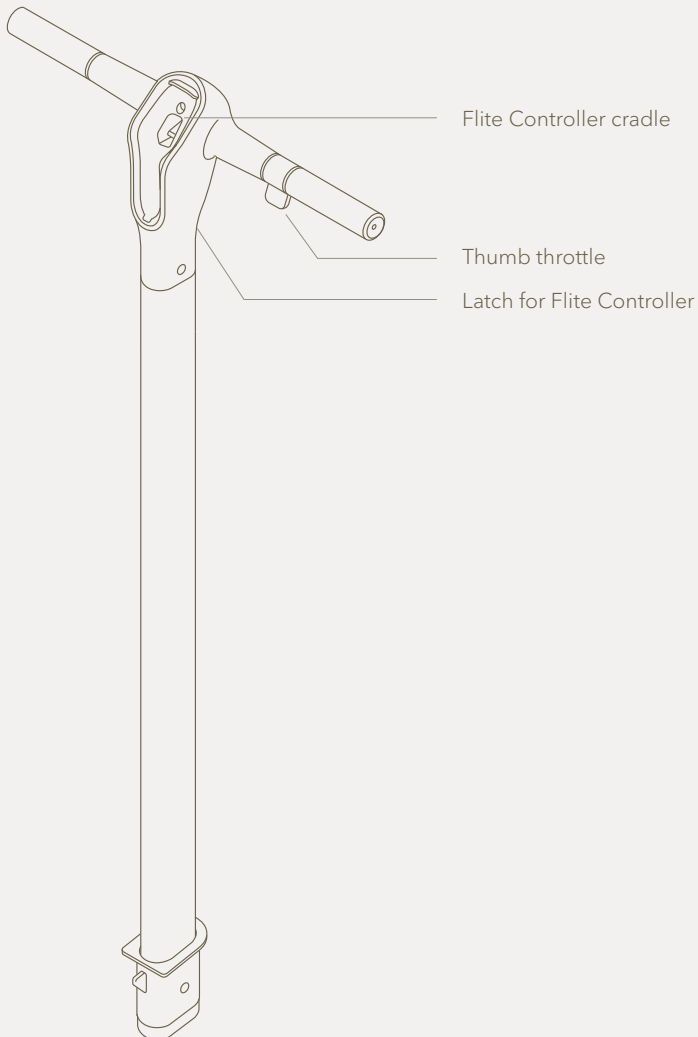

Turn on Flite Controller

- 1 Turn on Flite Controller by holding down the + button (right) AND Mode button (bottom) together for 3 seconds.
- 2 After a 3 second press of both buttons, the Flite logo will appear with the software version number, and the Controller will move to the home screen with lock icon.

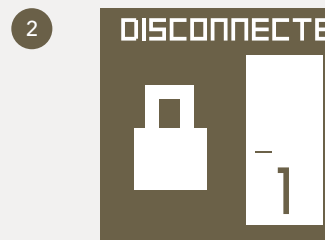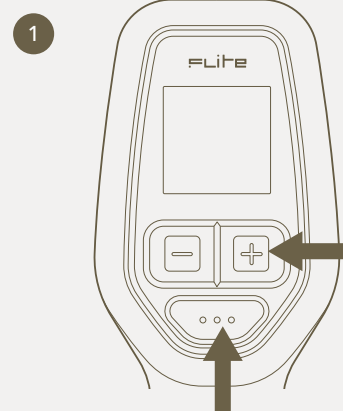

Flite Controller disconnected (requires pairing) and motor locked (requires arming). Gear 1.

Hold + button (right) for 7 seconds to put into pairing mode.

Connecting Flite App to Flitescooter

- 1 Turn off Flite Controller.
- 2 Ensure Flitescooter has power and the lid is closed.
- 3 Select **'Flitescooter'** from the **'Devices'** menu. When connected, the board Flitebox LED will turn purple. When performing some updates it will display green.
- 4 You will now be able to see the software version of the Flitescooter.
- 5 Once connected you can perform updates and sync session rides.

ENSURE FLITE CONTROLLER IS TURNED OFF AS THE APP CAN ONLY CONNECT TO ONE DEVICE AT A TIME.

WHEN NEW SOFTWARE UPDATES ARE AVAILABLE, YOU'LL SEE AN ORANGE UPDATE ICON.

WHEN CONNECTING TO THE APP, IT'S IMPORTANT TO FIRST CONNECT TO YOUR EFOIL OR YOUR FLITECELL WILL NOT BE VISIBLE OR CONNECTABLE.

BEFORE YOU UPDATE SOFTWARE MAKE SURE THE PHONE, FLITECELL AND FLITE CONTROLLER HAVE AT LEAST 20% CHARGE.

KEEP THE PHONE CLOSE AND IN LINE OF SIGHT WITH A STRONG WIFI/ CELLULAR NETWORK. DON'T USE THE PHONE FOR ANYTHING ELSE SUCH AS CALLS, TEXTS, OR OTHER APPS.

MAKE SURE THE FLITESCOOTER LID REMAINS CLOSED DURING THE UPDATE PROCESS.

Connecting Flite App to Flite Controller

- 1 Open the lid. Flitescooter will turn off after a few seconds.
- 2 Turn on Flite Controller by holding down the + button (right) AND Mode button (bottom) together for 3 seconds.
- 3 Ensure Flite Controller has power and is within range of the phone.
- 4 Select **'Flite Controller'** from the **'Devices'** list. When selected and connected, the current state of charge will be displayed.
- 5 You will now be able to see the software version of Flite Controller, perform any updates and change settings (e.g. kilometres, knots and miles per hour).

WHEN NEW SOFTWARE UPDATES ARE AVAILABLE, YOU'LL SEE AN ORANGE UPDATE ICON. WHEN UPDATING, DON'T USE THE PHONE FOR ANYTHING ELSE SUCH AS CALLS, TEXTS OR OTHER APPS.

NOTE: WHEN YOU CAN ONLY CONNECT TO ONE DEVICE ON THE APP AT A TIME THE OTHER MUST BE POWERED OFF TO CONNECT.

Capturing sessions

- 1 Flitescooter will automatically capture sessions to its onboard computer.
- 2 Connect to the Flitescooter and then tap **'Sync'** to view and download any new sessions.
- 3 Clicking a ride in the **'Sessions'** list will then take you to ride detail screen. Here you can play back your ride in various speeds, over an aerial map.

Flite Controller pairing procedure

- 1 Ensure Flitebox power cables are connected to Flitecell. Close the lid and wait for the audible beep indicating the board is switched on.
- 2 Open the Flitescooter lid and place the base of Flite Controller on the pairing target of the Flitebox (between the Flitecell cables).
Note - With the lid open, the system will shut down after 20 seconds.
- 3 Once the LED lights change to scrolling orange, remove Flite Controller from the pairing target and close the lid.
- 4 Set the controller into pairing mode by holding the + button (right) for 7 seconds until the words '**PRESS MODE TO COMMENCE PAIRING**' appear. Then press Mode button (bottom) to confirm. The words '**LOOKING FOR NEW PAIR**' will appear.
- 5 Once paired successfully, the LEDs will change to a light blue colour.
- 6 Fasten the latches once paired successfully.





Troubleshooting - If the lights are not solid blue, or the battery icon on your Flite Controller is crossed out, this indicates that the Flitecell has not paired, and the process needs to be repeated from Step 1.

The Magnetic Clip can be used to keep Flitecell activated longer. Remove once paired.


DO NOT HOLD FLITE CONTROLLER IN THE PAIRING POSITION FOR MORE THAN 30 SECONDS. HOLDING FLITE CONTROLLER IN THIS POSITION WILL PUT THE BOARD INTO SOFTWARE UPDATE.

Flitebox light


Flite Controller meaning

	Light blue solid	Ready to ride
	Red flashing	Alert (high temp, tilt, overcurrent, system error)
	Blue flashing	Armed
	Blue chasing	Motor running
	Orange flashing	Disconnected Flitecell / Controller
	Orange chasing	Searching for new pair Flitecell / Controller
	Purple solid	Flite App connected
	Purple chasing	Flite App data transfer

Flite Controller

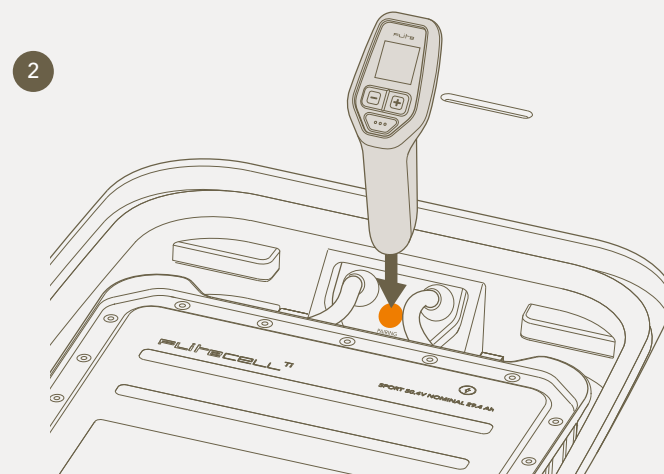

Searching for new pair

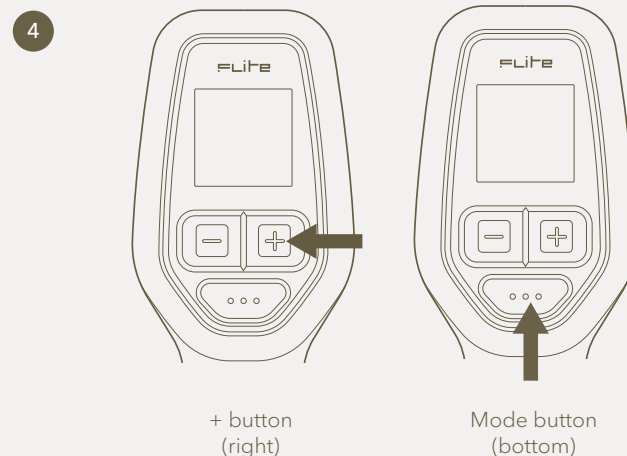


+ button
(right)

Mode button
(bottom)




Ready to ride

Flite Controller screens

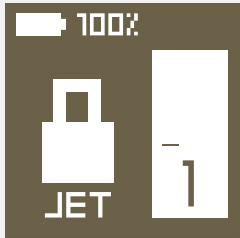


Motor locked

Ready to arm.
Flitecell 100% charged
Gear set to 1
Jet propulsion selected

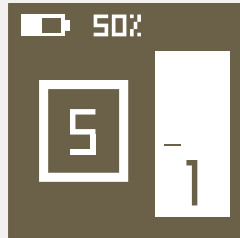

Motor armed

Motor unlocked with 5 seconds
to squeeze the throttle trigger.
Flitecell charge 50%

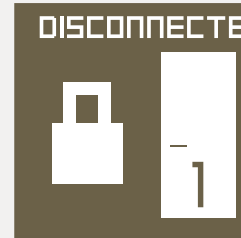


Disconnected (scrolling)

Flite Controller is not
connected or under water.
Check Flitescooter is turned
on and showing LEDs.



Looking for new pair (scrolling)

Flite Controller is
looking for a new pair.

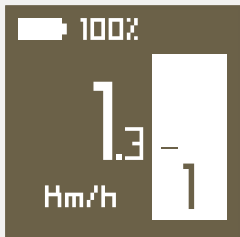


Current Speed / Gear

Speed 1.3 km/h
Gear 1




Distance

Travelled 6.4 kms
Remaining 24.7 kms
Current Speed 23.6 km/h

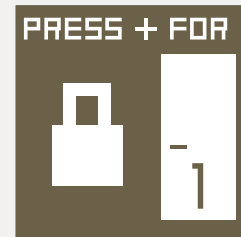

Pairing required

Flite Controller is not paired.
Hold + button (right) for 7
seconds until Flite Controller
displays LOOKING FOR
NEW PAIR.

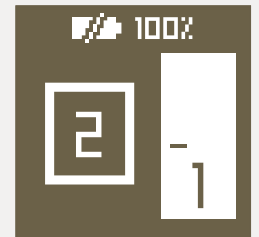

Battery not paired

Repeat pairing process
(see page 32)



Time

Elapsed 60 mins
Remaining 12 mins
Current speed 23.6 km/h



Speed

Maximum 35.1 km/h
Average 13.2 km/h
Current speed 23.6 km/h



Diagnostics

Power 1.5 kW
RPM x 1000 = 2,100
ESC Temp 40°C
Flitecell Temp 40°C
Flitecell Charge 100%
Current Speed 23.6 km/h



Efficiency

60 Wh/km
Flitecell charge 100%
Current speed 23.6 km/h

Flite Controller screens




Charge remaining

Flitecell 98%
Flite Controller 66%



Flite Controller charging

Flite Controller currently
at 10% state of charge.

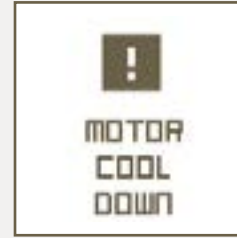

Motor Cool Down

The motor needs to cool
down. Flitescooter is
limited to low gears for
1 minute to allow motor
to cool.




High Temp

Flitecell is too hot.
Ride using low power
to allow Flitecell to cool,
otherwise Flitecell may
shut down.



50% Flitecell warning

Flitecell has 50% (or less)
remaining charge.

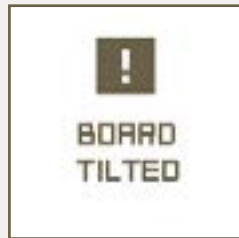

Flitescooter tilted

Flitescooter is disabled
due to the tilt angle.



Flitecell charge critical

Flitecell charge very low,
immediately return to
shore. Flitescooter is limited
to low gears only to
conserve charge.




Flite Controller low charge

Flite Controller requires
charge. Ensure Flite
Controller is charged
above 50% each ride.



High Current

Motor Cool Down mode
will be activated if power
isn't reduced.


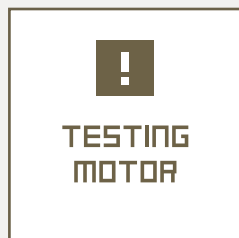


Testing Motor

To avoid accidental injury,
this feature prevents
the motor from being
turned on fully and any
overheating of seals, when
the board is on land.

Turning on Flitecell

- 1 Make certain nothing is caught in the seal. Carefully close the lid.
- 2 Twist and lock the two lid latches.
- 3 A few seconds after the lid is shut in position, you will hear a **'beep beep beep'** which signifies that the Flitecell and board have automatically turned on.
- 4 If the external board light is not active, open the lid and ensure the power cables are properly connected, and there are lights on the Flitecell indicating it is switched on.
- 5 Flitecell will automatically turn off 10 seconds after the lid is opened.

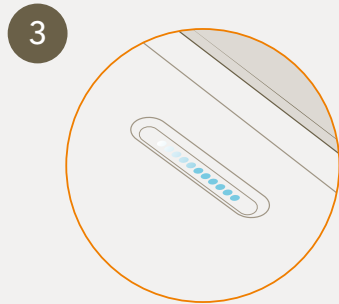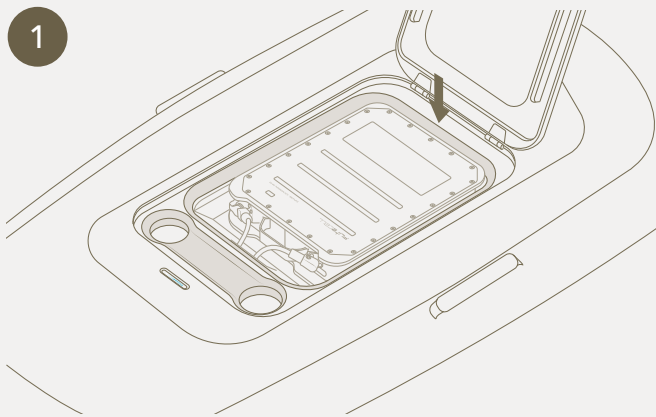

SEE PAGE 32 FOR PAIRING
FLITE CONTROLLER


THE SEAL IS A CRITICAL COMPONENT. IF DAMAGED CONTACT YOUR FLITE AUTHORISED SERVICE DEALER FOR A REPLACEMENT PART. NEVER RIDE THE BOARD WITH A DAMAGED SEAL.

THE FLITECELL AND CABLES ARE WATER RESISTANT; HOWEVER, ALWAYS KEEP FLITECELL, CABLES AND BOARD CAVITY DRY. WATER, ESPECIALLY SALT WATER, CAN ACCELERATE AGEING AND CORROSION. IF YOUR BOARD LEAKS, CHECK SEALS, AND CLEAN COMPONENTS CAREFULLY.

Connect the handlebars to Flitescooter

Flitescooter's excellent buoyancy allows you to step on from a dock or pontoon. If you are starting in the water, do step 2 and 3 from the shore, then float your board with the eFoil facing up to just over waist deep. From there, you can flip your Flitescooter and insert the handlebars.

- 1 Ensure the eFoil is paired to Flite Controller before going in the water.
- 2 Locate the handlebar cap and remove by gently pulling up.
- 3 Turn the handlebars upside down and place the Flite Controller wrist strap over the bottom of the handlebars. Carefully slide the wrist strap to the very top by holding onto Flite Controller.
- 4 With your other hand, lift the latch on the back of the handlebars. Place Flite Controller into the cradle of the handlebars and close the rear latch.
- 5 Turn the handlebar lock counterclockwise so that the opening lines up with the handlebar cavity.
- 6 Check the handlebar cavity is free of sand and grit.
- 7 Insert the handlebars into the handlebar cavity. Turn the handlebar lock clockwise until it stops. This will keep the handlebars locked into place.

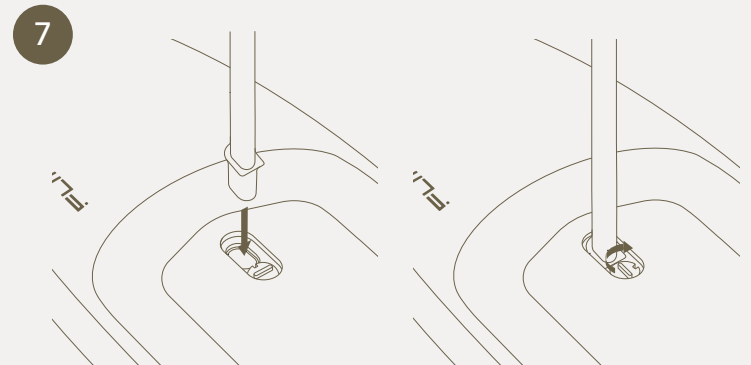

Flitescooter safety aids

We have implemented the following features to help you have a safe and enjoyable experience on Flitescooter:

- Draw Fly Zones on the app to help avoid shallow water
- Speed limiter which can be changed in the app or Flite Controller
- Wireless safety key to cut off power when you are not on the board

Select a suitable riding location

A location with a minimum 1.5 metre / 5 foot depth is essential. The wings and eFoil should never make contact with anything below the surface, including a sand bottom. Be aware of tide times, as well as submerged items such as branches, coral, boat chains and fishing lines. If you are unsure about the local area ask someone who knows the waterway for advice.

Choose a location away from swimmers and other water users and ensure local laws allow motorised craft to be used in the area.

Flitescooter should be used in smooth water without waves and currents. It is not designed for use in choppy water.

Flitescooter's excellent buoyancy allows you to step on from a dock or pontoon.

Ride time and range are dependent upon:

- Rider weight
- Average speed
- Water / wind conditions

ENSURING SAFE WATER DEPTH IS EXTREMELY IMPORTANT BEFORE RIDING. SELECT A LOCATION THAT HAS A MINIMUM DEPTH OF AT LEAST 1.5 METRE / 5 FEET.

ALWAYS MONITOR FLITECELL LEVELS WHILE RIDING AND TAKE CARE NOT TO DEplete THE FLITECELL BEFORE RETURNING TO YOUR POINT OF ORIGIN.

NEVER RIDE FLITESCOOTER FURTHER FROM SHORE THAN YOU ARE PREPARED TO SWIM BACK.


1.5M
5FT ↑
SAFE
DEPTH



Watch our video tutorials at fliteboard.com/video

Arming the motor

Flitescooter uses a safety lock to guarantee that riders cannot accidentally spin the motor by bumping the throttle trigger unintentionally. On land the eFoil will be in motor test and will not fully spin. This is by design. Riders must arm (unlock) the motor to Fliteboard.

- 1 To arm the motor, pull the throttle trigger all the way in on Flite Controller and then release it completely.
- 2 Press and then release the – button (left).
- 3 Pull the throttle trigger within the 5 second countdown window to activate Flite Jet 2. Always verify the eFoil is clear and in a safe location before activating the motor.

IMPORTANT - NEVER RUN THE MOTOR OUT OF WATER FOR MORE THAN 3 SECONDS, AS DOING SO CAN OVERHEAT AND DAMAGE THE SHAFT AND SEALS.


ALWAYS ENSURE FLITE CONTROLLER LANYARD IS ADJUSTED AND SECURELY ATTACHED TO YOUR WRIST BEFORE FLITEBOARDING.

ALWAYS TEST THE TRIGGER RESPONSIVENESS AT THE START OF YOUR FLITEBOARDING SESSION TO ENSURE IT IS FUNCTIONING CORRECTLY.




Riding Flitescooter for the first time

1 Wireless safety key

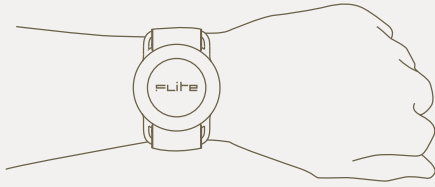


Press the face of the safety key to turn it on. You will now see 'Safety Key Detected' appear on Flite Controller.

2 Set 4 points of contact with hands and feet

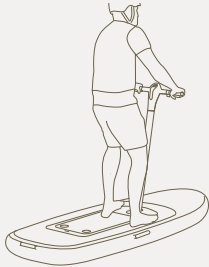


Stand with feet shoulder width apart.

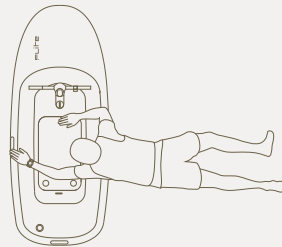


You can simply step onto the Flitescooter from a dock or climb up from the side.

3 Check and set your gear

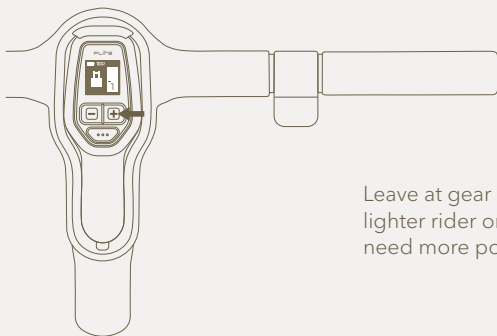


Leave at gear 1 if you are a lighter rider or increase if you need more power.

4 Arm the system

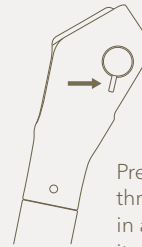


Press the thumb throttle all the way in and then release it completely.

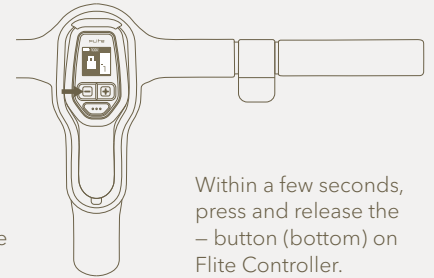

Within a few seconds, press and release the – button (bottom) on Flite Controller.


5 Gradually throttle to plane

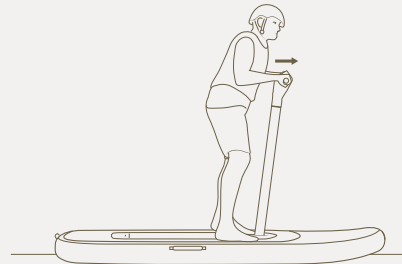

Press the thumb throttle and push forward gently on the handlebars to keep the board flat until planing.


The Flitescooter is planing when it skims over the surface of the water.

6 Lean back to fly

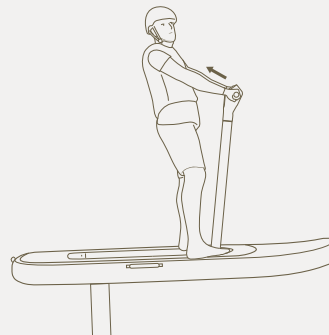

Shift your weight back by softly pulling on the handlebars.

7 Level out

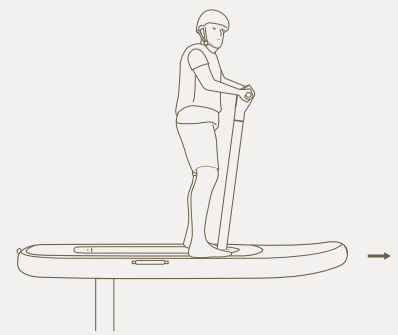

Push forward slightly to level out or touch down. You'll be up and flying in no time.

Flitescooter common mistakes

Flitescooter rides on wings that fly under water. Just like an airplane, Flitescooter needs sufficient and constant speed to avoid 'stalling' the wings, and must be flown level to avoid changes in altitude (which can cause a wing breach and splashdown). The three most common mistakes riders make when learning to Flitescooter are as follows:


1 Taking off with insufficient speed

Pushing or pulling the handlebars changes the angle of the board above the water, and the wings below the water. Pulling back to fly with insufficient speed will 'stall' the wing, causing a splashdown. To avoid this common mistake, continue gently pushing forward on the handlebars (to keep the nose of the board and wing down) until at flying speed. Flying speed is generally 20km/h / 12.5mph or slightly faster for heavier riders.




2 Flying too high

Once at sufficient flying speed, riders should take off smoothly by very gently shifting weight back and pulling back on the handlebars. Riders need to angle the nose of the board up a few degrees to take off, but then quickly return board and wing to level position to maintain constant altitude. The skill (and thrill) of Flitescooter is finding the right balance above the water. Pulling or leaning back too hard, or being too aggressive with the handlebars will cause a wing breach or stall, and will result in a splashdown.

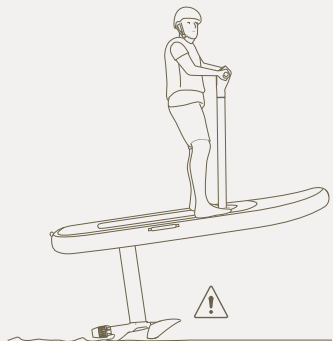

3 Speed variations

The thrust from Flite Jet is part of the overall balance of the hydrofoil system. Make changes using the thumb throttle smoothly and slowly to maintain smooth and level flight. Varying speed too aggressively can disrupt balance and cause a wing breach, stall or splashdown.

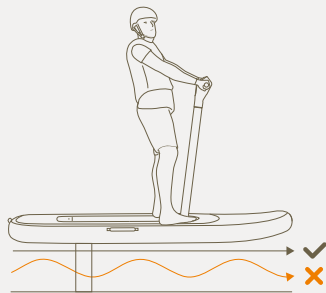

Flitescooter pro tips

Fly as low as possible when learning and touch down often until confident.

Once foiling, be aware of your weight position to help keep the board level.

If you are taking off too quickly or aggressively, shift feet slightly further forward or change to a lower stabiliser shim number. If you are having to stand too far back to fly (heavier riders) shift to a higher shim number.

If you are having difficulty getting up to speed, increase your starting gear number.

At low speed, lean back while steering.

Foiling through turns

Once comfortable flying in a straight line, you can steer by shifting weight from one foot to the other.

Start by doing very wide turns, using the handlebars to help you turn.

As you gain experience you can try tighter turns.

Keep speed constant through the turn.

All of this might sound complex, but if you keep your weight forward, fly in flat water, maintain constant speed, and take learning step by step, you will be foiling in no time.

RAPID RELEASE OF THE TRIGGER CAN CAUSE THE NOSE OF THE BOARD TO SUDDENLY DROP AND MAY CAUSE A CRASH.

Maintenance and storage

READ THROUGH THE ENTIRE STORAGE AND MAINTENANCE INSTRUCTIONS BEFORE STORING YOUR BOARD.

- 1 It is essential that your Flitescooter is serviced as per the 'Maintenance schedule' at the end of this User Guide to retain its high level of performance, safety and reliability, including warranty, as mentioned previously.
- 2 The service intervals are in both hours of ride time or years, whichever comes first.
- 3 The service schedule and intervals assume you will use your Flitescooter in accordance with our guidelines.

Periodic checks

- 1 Ensure that you view our 'Care and Maintenance video' fliteboard.com/video before first using your Flitescooter.
- 2 Ensure that after each session, you visually inspect all elements of your Flitescooter including board, wings, mast, Flitecell and Flite Controller for any damage or water ingress.
- 3 Ensure that you perform the 6 Month Flitecell Checklist located on the Support Page on the website.
- 4 Ensure all connections are clean, free from corrosion and damage after each use.
- 5 Ensure the hinges have been rinsed with fresh water, are clean, free from corrosion and damage after each use.

Maintenance schedule intervals

The hours / years intervals shown in the maintenance schedule section of the User Guide are intended as a guide. If you operate a Fliteschool then supplementary servicing may be necessary.

CAUTION - AVOID LEAVING YOUR FLITESCOOTER TIED UP IN MARINAS OR NEAR VESSELS FOR EXTENDED PERIODS OF TIME. ANY EARTH LEAKAGE FROM SURROUNDING VESSELS CAN LEAD TO ACCELERATED CORROSION OF YOUR EFOIL COMPONENTS.

Please contact support@fliteboard.com for any queries or questions.

Flitescooter

Post ride

Open the board lid slowly, taking care to not let it fall on the nose of the board or the handlebars.

After each ride, check to see if any water has leaked into the Flitecell cavity.

If so, check the cause of the leak which may include: sand present on the sealing surface; a damaged or dislocated seal; damaged hinges or latches; or something obstructing the lid when closed.

Once the Flitecell has been removed ensure that the complete board, including Flitecell compartment, seals, hinges, lid and eFoil are washed thoroughly in fresh water.

Let the board air dry and then wipe down with a clean, dry absorbent cloth.

Regular maintenance

Check the carbon core regularly for damage or cracks. If damage is present have it repaired by a professional surfboard or sailboard repairer. The inflatable bladder can be repaired using the supplied repair kit. 15 - 16 PSI is the recommended inflation pressure.

Inspect the orange mast flange seal regularly for any damage and ensure it is kept clean and free of any sand, grit or dirt.

During daily use ensure that the eFoil is removed from the board and wings from the eFoil at least every three days. Ensure Tef-Gel is reapplied to all screws.

Storage

Ensure that all sand, grit, dirt, and salt residue has been washed off with fresh water, and sufficiently dried. Ensure that the Flitecell has been wiped down with a clean, dry absorbent cloth while switched off.

Apply Contact Cleaner to all connectors to reduce the risk of corrosion.

Take care not to scratch the Flitescooter core.

Wash the inflatable bladder with warm soapy water and dry before storage. The inflatable bladder can remain inflated, or be deflated and stored on or off the carbon core to suit your storage preference.

Place your Flitescooter in the provided bag, then store in a clean and dry environment.

Keep the board and bag out of the sun.

eFoil system

Post ride

Disconnect the Flitecell power cables.

Rinse thoroughly with clean fresh water after every use.

Rinse the inside of the mast (through the notch in the rear of the flange) with fresh water.

Rinse around the mast flange to wash salt away from the board connection area (if keeping the board and eFoil attached).

Regular maintenance

Disassemble the eFoil from the board.

Remove the wing, fuselage cover and tail, and clean thoroughly with fresh soapy water to remove any built-up salt or sand.

Storage

Always store the eFoil in a clean, dry environment.

Flite Controller and handlebars

Post ride

Remove the Flite Controller from the handlebars. Rinse Flite Controller in fresh water to clean away salt and debris. Ensure a steady stream of fresh water is applied directly into the trigger housing. While doing so press and depress the trigger numerous times to loosen any sand, grit, debris that may affect its performance.

Peel out the rubber cover on the underside and clean this with fresh water. Ensure this area is dry before replacing the cover.

Regular maintenance

Pre and post season, the 3 torque screws on the underside of the controller can be undone to release the trigger. This will allow you to thoroughly clean and inspect the trigger, spring and magnet.

Storage

Store in a cool dry place, out of the sun.

Flitecell

Post ride

Wipe Flitecell down with a wet cloth (fresh soapy water), Do not spray water directly on the battery.

Flitecell is waterproof but it should remain dry where possible. DO NOT submerge or shower.

Avoid placing Flitecell on the sand, which can make its way into the Flitecell cavity and scratch surfaces.

DO NOT charge the Flitecell immediately after use. The Flitecell temperature may be too high. Allow 30 mins between riding and charging to allow for cooling.

DO NOT clean the Flitecell or charger with denatured alcohol or other flammable solvents.

DO NOT clean the Flitecell or charger with WD-40, citrus cleaners, contact cleaners.

Avoid contact with sunscreens, lubricants, petrol, thread locker and diesel.

IF THE BOARD HAS LEAKED AND / OR THE FLITECELL HAS BEEN SUBMERGED IN WATER, INSPECT FOR WATER INGRESS USING THE SIGHT GLASS LOCATED ON THE SIDE OF THE FLITECELL.

STAND THE FLITECELL UP ON ITS BOTTOM END FOR ONE MINUTE AND THEN PLACE THE FLITECELL ON ITS SIDE WITH THE SIGHT GLASS FACING DOWN FOR ONE MINUTE. INSIDE THE SIGHTGLASS IS A COLOUR CHANGING LABEL WHICH WILL TURN RED IF WATER IS PRESENT. INSPECT THE SIGHT GLASS AND CONFIRM THAT WATER IS NOT PRESENT BEFORE CHARGING AND USING A FLITECELL THAT HAS BEEN IMMERSSED IN WATER.


IF A FLITECELL HAS BEEN DROPPED OR DAMAGED, CONTACT FLITEBOARD IMMEDIATELY AND DO NOT USE THE FLITECELL.

Regular maintenance

1. Examine the charger regularly for damage to the cord, plug, enclosure or other parts. Periodically clean the connections with a Q-tip / cotton tip that has been dampened with isopropyl alcohol (IPA).
2. Inspect all power terminals along with the CANbus receptacle. Periodically clean the terminals with a Q-tip / cotton tip that has been dampened with isopropyl alcohol (IPA).
3. Inspect all screws for heavy rust or corrosion.
4. Inspect sight glass for any water ingress. Sight glass water indicator will have turned pink if water has entered. If water has entered the Flitecell, isolate the unit and contact Fliteboard support immediately.
5. Check the gore vent is in position.
6. Inspect the case of the Flitecell for any cracks or damage. Check the connectors and handles especially of the case.

Storage

1. Keep Flitecell stored out of the reach of children and pets.
2. DO NOT store the Flitecell near heat sources such as a furnace or heater.
3. DO NOT leave the Flitecell inside of a vehicle on hot days.
4. Ideal Flitecell storage temperature between 10°C (50°F) and 25°C (77°F) in a safe, dry place.
5. Do NOT store the Flitecell whilst charging. Disconnect the charger when not in use.
6. DO NOT store the Flitecell fully charged or discharged for a longer period of time.
7. For long or short term storage of Flitecell, a charge state of 40% (1 LED ON indicates 25 - 35% charge) is optimal. Only fully charge the Flitecell when planning a ride. We recommend that you discharge the Flitecell during your final session of the season, remembering to keep it around 40% charge before it goes into storage. Occasionally charging the Flitecell up to 60% SOC every 2 months and letting the Self Balancing technology work away will also prevent any large imbalances or large capacity drops. This can also be sited through the FliteAPP and used to reach the correct SOC%. Connect to the Flitecell on the devices page and charge to designated SOC%.
8. After long term storage of your Fliteboard components and before use, you are required to charge the Flitecell and Flite controller to 100% using the supplied Fliteboard chargers. These charging processes may take longer than normal (up to 24 hours) but this gives you time to inspect and perform routine maintenance and checks before your ride.

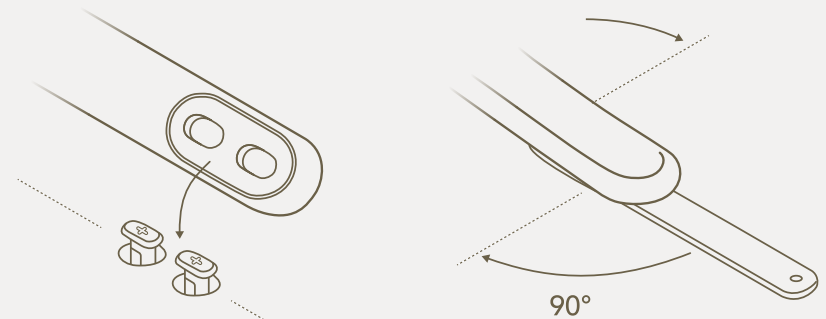

DO NOT CLEAN THE FLITECELL OR CHARGER WITH WD-40, CITRUS CLEANERS, CONTACT CLEANERS.

AVOID CONTACT WITH SUNSCREENS, LUBRICANTS, PETROL, THREAD LOCKER, AND DIESEL.

Troubleshooting

Issue	Troubleshooting guide
Flitescooter starts to slow or 'limp'	This is a sign your Flitecell is about to run down or overheat. Move out of the water and recharge your Flitecell. Refer to the Flitecell charging instructions (page 18)
Flitescooter turns off while riding	Move out of the water to a safe, dry, clean area. Check the LED on Flitecell to confirm if it still has charge. If it has charge, disconnect and reconnect the Flitecell to see if you can establish a connection. Inspect the Flitecell for water or damage. There should be no water inside the Flitecell housing.
Flite Controller disconnects	Re-arm Flite Controller. See arming instructions (page 32)
Flite Controller unpairs	Re-pair Flite Controller. See pairing instructions (page 32)
Flitecell charger won't connect	Disconnect and reconnect. Contact Fliteboard Customer Support. fliteboard.com/support
Flite Controller won't turn on	Ensure Flite Controller is fully charged. See Flite Controller charging instructions (page 17)
Flite Controller shows a battery or temperature warning	Slow down or decrease power consumption to cool the Flitecell down. Flite Controller will warn you when the Flitecell temperature reaches 55°C and again at 60°C. At 65°C the Flitecell will automatically start to shut down to preserve itself.

Issue	Troubleshooting guide
Flite Controller trigger not functioning	To recalibrate Flite Controller trigger, press and hold the – button (left) and Mode button (bottom) simultaneously. Follow the on-screen instructions.
Water in the Flitescooter cavity	Remove the board from the water. Remove the Flitecell. Dry the board completely. Check the Flitecell for leaks. If the Flitecell has taken in water refer to the section below. Once dried and re-assembled, take care that the Flitescooter cavity seal is properly compressed when closing the Flitescooter lid.
Water in Flitecell	Flitecell has an indicator for water damage. If water has penetrated the casing, regularly check the circular water indicator on the side of your Flitecell. If the sticker has turned red, this means water has penetrated the housing. IF WATER HAS PENETRATED THE FLITECELL, PLEASE SET FLITECELL ASIDE IN A COOL DRY PLACE. DO NOT ATTEMPT TO USE A FLITECELL THAT HAS BEEN WATERLOGGED. CONTACT FLITEBOARD IMMEDIATELY.
Unable to pair Flite Controller	Please ensure no other controllers or boards are switched on. Try again as per pairing instructions (page 32)
Unable to pair Flite Controllers to multiple boards	Do not attempt to pair multiple Flite Controllers to multiple Flitescooters simultaneously. Always pair one at a time.
Reduced ride time	The battery management system (BMS) balances and optimises the Flitecell during each charge cycle. Allow 24 - 48 hours after charging before Flitecell use.

Technical specifications

Load range	RECOMMENDED	WARRANTY LIMIT
Flitescooter with Flite Jet 2	120kg / 265lbs	120kg / 265lbs

Ride time 85kg rider Up to 1 hr 30 min (Flitecell Explore)
Using a large wing at slow foiling speed, it's possible to ride for over 2 hours.

Board details	KG	LBS	MEASUREMENTS	LITRES
Flitescooter	16	35	2130 L x 880 W x 150mm D (83 ⁵⁵ / ₆₄ " x 34 ⁴¹ / ₆₄ " x 5 ²⁹ / ₃₂ "	237
Handlebars	1.9	4.2	1230 L x 540 W x 110mm D (48 ²⁷ / ₆₄ " x 21 ¹⁷ / ₆₄ " x 4 ²¹ / ₆₄ "	

WEIGHTS & MEASUREMENTS MAY VARY

Travel case	MEASUREMENTS
Flitescooter	1290 L x 640 W x 3450mm D (50 ²⁵ / ₃₂ " x 25 ¹³ / ₆₄ " x 13 ²⁵ / ₆₄ "
eFoil case	1100 L x 640 W x 260mm D (3'8" x 2'2" x 10")
Flitecell travel bag	450 L x 370 W x 90mm D (5'3" x 2'3" x 3' ⁵ / ₆ "

Flitescooter

Type	Inflatable
Pressure	15 - 16 PSI

eFoil systems with Flite Jet 2

Input power	5,000 Watts
Max output power at shaft	3,600 Watts
Nominal voltage	52V
Maximum current	100A
Motor type	Brushless
Motor speed	10500 rpm peak
Protections	Overheating, overcurrent
Jet diameter	88mm

Flite Controller

Communication type	Bluetooth
Speed control	20 virtual gears
Runtime	Average charge 24 hrs / Standby 200 hrs
Rated cycles	1000 charge cycles
Protection grade	IP67

Flitecell Fast Charger

Charging current	25A
Charge time	1 hr 45 min Flitecell Explore 1 hr 15 min Flitecell Sport 50 min Flitecell Nano

Flitecell Charger

Charging current	13.5A
Charge time	2 hr 30 min Flitecell Explore 1 hr 45 min Flitecell Sport 1 hr Flitecell Nano

Flitecell Explore

Size	390mm x 305mm x 80mm (15" x 12" x 3")
Capacity	40Ah / 2016Wh
Weight	14.5kg / 32lbs
Protection	IP67
Max charge voltage	58.8V
Min voltage	42V
Nominal voltage	50.4V
Rated continuous discharge current	100A
Rated charge current	25A
Rated cycles >80% capacity	400 Cycles / 2 years
Temperature discharge limits	0 - 70°C 32 - 158°F
Temperature charge limits	0 - 50°C 32 - 122°F
Communication	Bluetooth Low Energy
BMS critical functions	Balancing, Over-temperature (Charge / Discharge) Over-current, short-circuit protection, reverse polarity and over & under voltage.
Other safety	3 levels of fusing adds redundancy if BMS failure occurs. Conformal / resin coatings used on PCB's. Phase Changing Material between cells and sight glass to check for leaks.
Shipping and transport	Flitecell (batteries) are considered dangerous goods and must not be shipped without working with a dangerous goods shipping specialist. Shipping batteries marked as normal goods without informing the shipping party is illegal and dangerous. The Material Safety Data Sheet (MSDS) is required for shipping the batteries. ULTRA L2, FLITE AIR AND FLITE AIR PRO ARE NOT COMPATIBLE WITH FLITECELL EXPLORE.

Flitecell Sport

Size	305mm x 305mm x 80mm (12" x 12" x 3")
Capacity	29.4Ah / 1482Wh
Weight	10.6kg / 23.4lbs
Protection	IP67
Max charge voltage	58.8V
Min voltage	42V
Nominal voltage	50.4V
Rated continuous discharge current	100A
Rated charge current	25A
Rated cycles >80% capacity	400 Cycles / 2 years
Temperature discharge limits	0 - 70°C 32 - 158°F
Temperature charge limits	0 - 50°C 32 - 122°F
Communication	Bluetooth Low Energy
BMS critical functions	Balancing, Over-temperature (Charge / Discharge) Over-current, short-circuit protection, reverse polarity and over & under voltage.
Other safety	3 levels of fusing adds redundancy if BMS failure occurs. Conformal / resin coatings used on PCB's. Phase Changing Material between cells and sight glass to check for leaks.
Shipping and transport	Flitecell (batteries) are considered dangerous goods and must not be shipped without working with a dangerous goods shipping specialist. Shipping batteries marked as normal goods without informing the shipping party is illegal and dangerous. The Material Safety Data Sheet (MSDS) is required for shipping the batteries.

Flitecell Nano

Size	218mm x 305mm x 80mm (8 ½" x 12" x 3")
Capacity	16.8Ah / 806Wh
Weight	6.2kg / 13.7lbs
Protection	IP67
Max charge voltage	58.8V
Min voltage	42V
Nominal voltage	50.4V
Rated continuous discharge current	100A
Rated charge current	25A
Rated cycles >80% capacity	400 Cycles / 2 years
Temperature discharge limits	0 - 70°C 32 - 158°F
Temperature charge limits	0 - 50°C 32 - 122°F
Communication	Bluetooth Low Energy
BMS critical functions	Balancing, Over-temperature (Charge / Discharge) Over-current, short-circuit protection, reverse polarity and over & under voltage.
Other safety	3 levels of fusing adds redundancy if BMS failure occurs. Conformal / resin coatings used on PCB's. Phase Changing Material between cells and sight glass to check for leaks.
Shipping and transport	Flitecell (batteries) are considered dangerous goods and must not be shipped without working with a dangerous goods shipping specialist. Shipping batteries marked as normal goods without informing the shipping party is illegal and dangerous. The Material Safety Data Sheet (MSDS) is required for shipping the batteries.

Warranty registration / Details of purchase

Register your product using Flite App fliteboard.com/app

WE RECOMMEND USING FLITE APP TO ENSURE YOUR EFOIL AND FLITE CONTROLLER ALWAYS HAVE THE LATEST SOFTWARE

Customer name

Business name
(if applicable)

Country & State

Purchased from

Date of purchase

Board type & serial number

eFoil type & serial number

Propulsion Folding Prop Flite Propeller True Glide Flite Jet 2

Flitecell type Explore Sport Nano

Flitecell serial number(s)

Flitecell Charger type & serial number

Flite Controller type & serial number

Maintenance schedule

FIRST 200 HOURS / 2 YEAR SERVICE

WHICHEVER COMES FIRST

Inspected

Mast

Fuselage

Flitebox

Cables

Prop Guard

Propeller

Flite Jet 2

Flitecell health

Flite Controller

MN Flite Controller

Replaced

Seals

Oil

Flitebox Gore vent

Cables

Prop Guard

Propeller

Flite Jet 2

Anode

Flite Controller

MN Flite Controller

Comments

eFoil Hours of use

Date

Name of Technician

Signature of Technician

Flite Service Dealer

Maintenance schedule

300 HOURS / 3 YEAR SERVICE

WHICHEVER COMES FIRST

Inspected

Mast

Fuselage

Flitebox

Cables

Prop Guard

Propeller

Flite Jet 2

Flitecell health

Flite Controller

MN Flite Controller

Replaced

Seals

Oil

Flitebox Gore vent

Cables

Prop Guard

Propeller

Flite Jet 2

Anode

Flite Controller

MN Flite Controller

Comments

eFoil Hours of use

Date

Name of Technician

Signature of Technician

Flite Service Dealer

Maintenance schedule

400 HOURS / 4 YEAR SERVICE

WHICHEVER COMES FIRST

Inspected

Mast

Fuselage

Flitebox

Cables

Prop Guard

Propeller

Flite Jet 2

Flitecell health

Flite Controller

MN Flite Controller

Replaced

Seals

Oil

Flitebox Gore vent

Cables

Prop Guard

Propeller

Flite Jet 2

Anode

Flite Controller

MN Flite Controller

Comments

eFoil Hours of use

Date

Name of Technician

Signature of Technician

Flite Service Dealer

Maintenance schedule

500 HOURS / 5 YEAR SERVICE

WHICHEVER COMES FIRST

Inspected

Mast

Fuselage

Flitebox

Cables

Prop Guard

Propeller

Flite Jet 2

Flitecell health

Flite Controller

MN Flite Controller

Replaced

Seals

Oil

Flitebox Gore vent

Cables

Prop Guard

Propeller

Flite Jet 2

Anode

Flite Controller

MN Flite Controller

Comments

eFoil Hours of use

Date

Name of Technician

Signature of Technician

Flite Service Dealer

Maintenance schedule

600 HOURS / 6 YEAR SERVICE

WHICHEVER COMES FIRST

Inspected

Mast

Fuselage

Flitebox

Cables

Prop Guard

Propeller

Flite Jet 2

Flitecell health

Flite Controller

MN Flite Controller

Replaced

Seals

Oil

Flitebox Gore vent

Cables

Prop Guard

Propeller

Flite Jet 2

Anode

Flite Controller

MN Flite Controller

Comments

eFoil Hours of use

Date

Name of Technician


Signature of Technician

Flite Service Dealer


Congratulations on becoming a Flitescooter owner.

Now it's time to get out there and experience the freedom of Flite.


Fastener reference guide

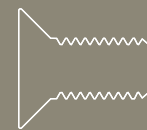

Conical wing
2 x M8 x 18mm

 

Fuselage tail
1 x M6 x 16mm

 

Stabiliser
2 x M6 x 20mm

Mast Flange
4 x M6 x 20mm

