


FLI 037 TRUE GLIDE PROPELLER

FLITE


Welcome to True Glide™

True Glide helps you catch waves and ride swells using the power of the ocean. Perfectly paired with the Pro Tail Cover and large efficient wing like the Flow 1100 or 1300.

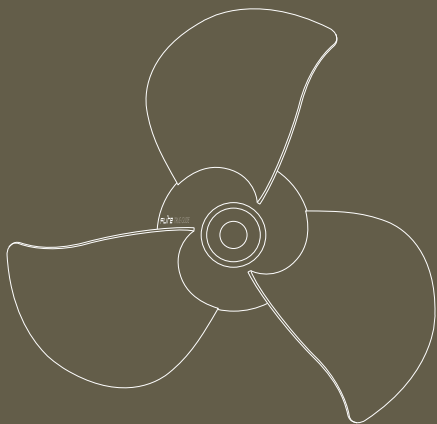


Installation


- 1 Remove the propellor nut using the Prop Nut Removal Tool (13mm socket) in an anti-clockwise direction, while holding the propellor using a soft cloth.

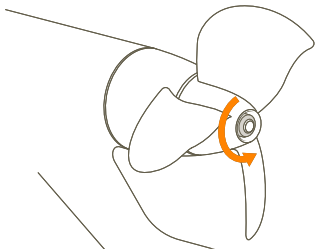


- 2 Remove the current Prop Pin and replace with the supplied smaller pin.

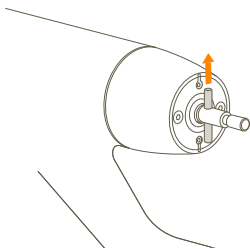

- 3 Insert the new Prop Pin, then position the True Glide Prop onto the shaft, ensuring engagement with the Pin.

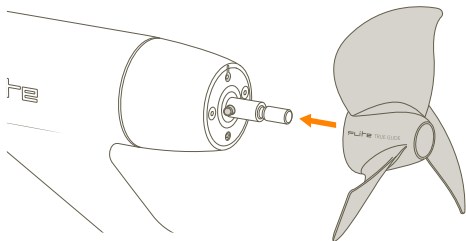

- 4 Seat the supplied washer into the True Glide Prop. Use the supplied tool to hold the True Glide Prop in place whilst screwing the new Nylock Nut tightly against the washer in a clockwise direction.

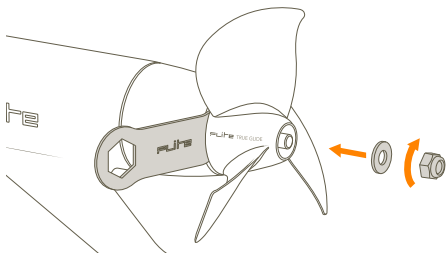

Tips

Be sure to always use a new, unused Nylock Nut for every installation.

Check True Glide is free spinning (anti-clockwise) and engaging (clockwise).

Make sure the Prop nut is tight by checking the Prop has minimal axial play of less than 1mm.

Always check all screw connections when you go Fliteboarding.

Happy Fliteboarding.

Care Instructions

After your ride, disengage the prop by safely spinning by hand anticlockwise. Never handle the propeller while Flitecell is connected.

Be sure to wash with fresh water and dry thoroughly after use to ensure longevity of your True Glide Prop.

We recommend to clean the bearing periodically and re-grease with marine grade grease to improve free-spinning if necessary.

Always clean the bearing, fully dry and re-grease before long term storage.

Support

For detailed information, go to support.fliteboard.com

Safety

Please refer to Fliteboard user manual for full safety information and disclaimer.

Fliteboard Pty Ltd
156 Jonson Street
Byron Bay 2481 NSW
Australia
+61 02 669 431 86

Fliteboard USA LLC
3 Main Street
Suite C2 Nyack
New York 10960
+1 844 50 FLITE

Fliteboard Europe B.V
Van den Eijndekade 4
2102 LE Heemstede
The Netherlands
+31 6 480 137 32